

REAR WHEEL HUB

- Apply small amount of SUZUKI SUPER GREASE “A” to the wheel hub’s spline.

 **99000-25030: SUZUKI SUPER GREASE “A” (USA)**
99000-25010: SUZUKI SUPER GREASE “A” (Others)

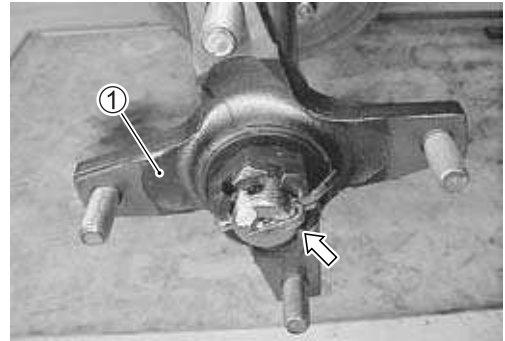
- Install the rear wheel hub ①, washer and nut.
- Tighten the rear wheel hub nut to the specified torque.

 **Rear wheel hub nut: 100 N·m (10.0 kgf·m, 72.5 lb-ft)**

- Install the cotter pin into the rear axle.
- Install the rear wheel. (➡ below)

CAUTION

Replace the removed cotter pin with a new one.

**FRONT WHEEL**

- Install the hub plate ①.
- Install the front wheel.
- Tighten the wheel set nuts to the specified torque.

 **Wheel set nut: 50 N·m (5.0 kgf·m, 36.0 lb-ft)**

**NOTE:**

When installing the front wheel, make sure that the arrow **A** on the tire points in the direction of rotation.

**REAR WHEEL**

- Install the rear wheel.
- Tighten the wheel set nuts to the specified torque.

 **Wheel set nut: 50 N·m (5.0 kgf·m, 36.0 lb-ft)**

NOTE:

When installing the rear wheel, make sure that the instruction “SIDE FACING OUTWARDS” **B** on the rear tire faces outwards.

