

Service Manual Index

NOTE: Refer to the following list to look up DTCs, symptoms, fuses, connectors, wire harnesses, specifications, maintenance schedules, and general service information:

DTC Troubleshooting Indexes

A/C	21-9
ABS-TCS Components	19-45
Automatic Climate Control	21-71
Automatic Transaxle	14-7
Doors	22-294
Fuel and Emissions	11-6
SRS	23-48

Symptom Troubleshooting Indexes

A/C	21-10
ABS-TCS Components	19-46, 88
Automatic Climate Control	21-72
Automatic Transaxle	14-9, 252
Cruise Control System	4-44
Fan Controls	10-20
Fuel and Emissions	11-9
Navigation	22-352
Power Sliding Doors	22-292
Rear Heater-A/C	21-123
SRS	23-54
Steering	17-4

Fuse/Relay Indexes

Multi-fuse/relay Box	22-78
Power Distribution	22-80
Under-dash Fuse/Relay Box, Driver's	22-76
Under-dash Fuse/Relay Box, Passenger's	22-77
Under-hood Fuse/Relay Box	22-75
Under-hood Subfuse Box	22-79

Connector and Wire Harness Indexes

Component Connectors (to harness)	22-16
Grounds (to components)	22-85
In-line Connectors (to harness)	22-15

Specifications section **Section 2**

Maintenance section **Section 3**

General Information section **Section 1**

A

A/C

Component Location Index	21-3
How-to Information	21-8
Description	21-11
Circuit Diagram	21-14
Test	21-60

A/C Compressor

Replacement	21-49
-------------	-------

A/C Compressor Clutch

Inspection	21-51
Overhaul	21-52

A/C Compressor Clutch Circuit

Troubleshooting	21-32
-----------------	-------

A/C Compressor Relief Valve

Replacement	21-53
-------------	-------

A/C Condenser

Replacement	21-54
-------------	-------

A/C Condenser Fan High Speed Circuit

Troubleshooting	21-30
-----------------	-------

A/C Pressure Switch Circuit

Troubleshooting	21-35, 110
-----------------	------------

A/C Signal Circuit

Troubleshooting	11-188, 190
-----------------	-------------

A/T Assembly

Removal	14-138, 369
Installation	14-147, 379

A/T Clutch Pressure Control Solenoid Valves

Test	14-132, 360
Replacement	14-133, 361, 362, 363

A/T Countershaft Assembly

Description	14-22, 266
Disassembly/Inspection/ Reassembly	14-209, 444

A/T Differential

Component Location Index	14-237, 477
Inspection	14-237, 477

A/T Electronic Control System

Description	14-29, 276
-------------	------------

A/T Gear Position Indicator

Replacement	14-176, 406
-------------	-------------

A/T Gear Position Indicator System

Component Location Index	14-164, 397
Circuit Diagram	14-165, 398
Input Test	14-172, 402

A/T Hydraulic Controls

Description	14-43, 47, 288, 292
Test	14-128, 355

A/T Mainshaft Assembly

Description	14-20, 264
Disassembly/Inspection/ Reassembly	14-206, 441

A/T Secondary Shaft Assembly

Disassembly/Inspection/ Reassembly	14-213, 448
Inspection	14-214, 449

A/T Shift Cable

Replacement	14-160, 393
Adjustment	14-162, 395

A/T Shift Lever

Removal	14-157, 390
Installation	14-158, 391
Disassembly/Reassembly	14-159, 392

ABS Control Unit

How-to Information	19-41
Replacement	19-77

ABS Indicator Circuit

Troubleshooting	19-73, 153
-----------------	------------

ABS Modulator Unit

Removal/Installation	19-76
----------------------	-------

ABS-TCS Components

Component Location Index	19-40, 80
Description	19-47, 89
Circuit Diagram	19-56, 106, 108, 110

ABS-TCS Control Unit

How-to Information	19-81
Replacement	19-160

ABS-TCS Modulator Unit

Removal/Installation	19-158
----------------------	--------

Accessory Power Socket, Front

Test/Replacement	22-164
------------------	--------

Accessory Power Socket, Rear

Test/Replacement	22-165
------------------	--------

Accessory Power Sockets

Circuit Diagram	22-163
-----------------	--------

Accumulator Body

Disassembly/Inspection/ Reassembly	14-203, 436
---------------------------------------	-------------

Air Cleaner

Disassembly/Reassembly	11-241
------------------------	--------

Air Cleaner Element

Replacement	11-240
-------------	--------

Air Mix Control Motor

Replacement	21-37
Test	21-37

Airbag Cutoff Indicator, Front Passenger's

Test	23-393
------	--------

Airbag, Driver's

Replacement	23-368
Repair	23-373

Airbag, Front Passenger's

Replacement	23-370
-------------	--------

Alternator

Replacement	4-27
Overhaul	4-32, 38

Alternator FR Signal Circuit

Troubleshooting	11-192, 193
-----------------	-------------

Alternator-compressor Belt

Inspection	4-26
Replacement	4-26

Alternator-compressor Belt Auto-tensioner

Inspection	4-28, 29
Replacement	4-29, 30

Alternator-compressor Belt Auto-tensioner Pulley

Replacement	4-31
-------------	------

Antenna

Replacement	22-162
-------------	--------

(cont'd)