



General Information

Vertical Insertion (JST)


- Use black stick under cable to remove.
- Keep connector level to board when disconnecting and reconnecting.
- Press evenly when reconnecting or connector can be tipped up and not fully seated.

Examples:

- fan cables
- right speaker
- left speaker and microphone on underside of board

Connector Types on Logic Board

On the logic board are five types of connectors, each requiring special handling. Make sure you read these tips before disconnecting and installing the connectors.

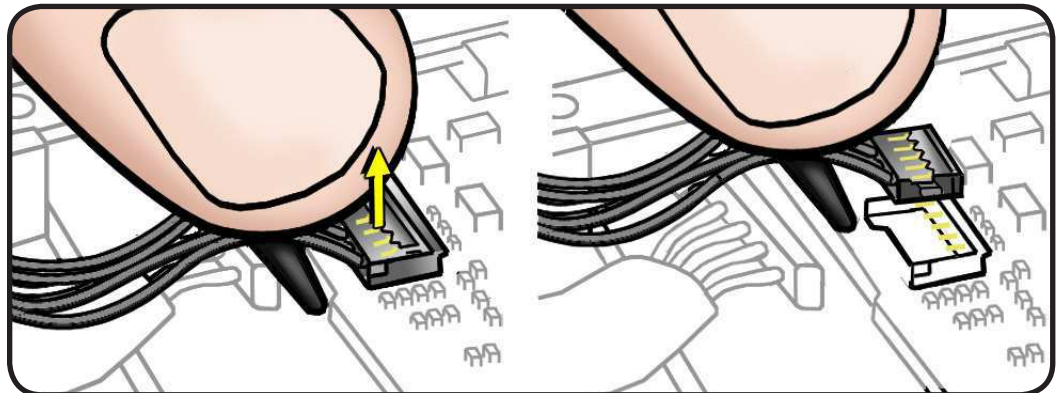

Locking Lever

- Flip up lever 90 degrees for removal.
- Slide connector into receptacle on same horizontal plane as board.
- Lock down lever after inserting cable.

Examples:

- IR/SIL flex cable
- keyboard backlight flex cable
- Express Card cable
- BIL cable
- keyboard flex cable

