



4. Remove the speaker mounting screw.

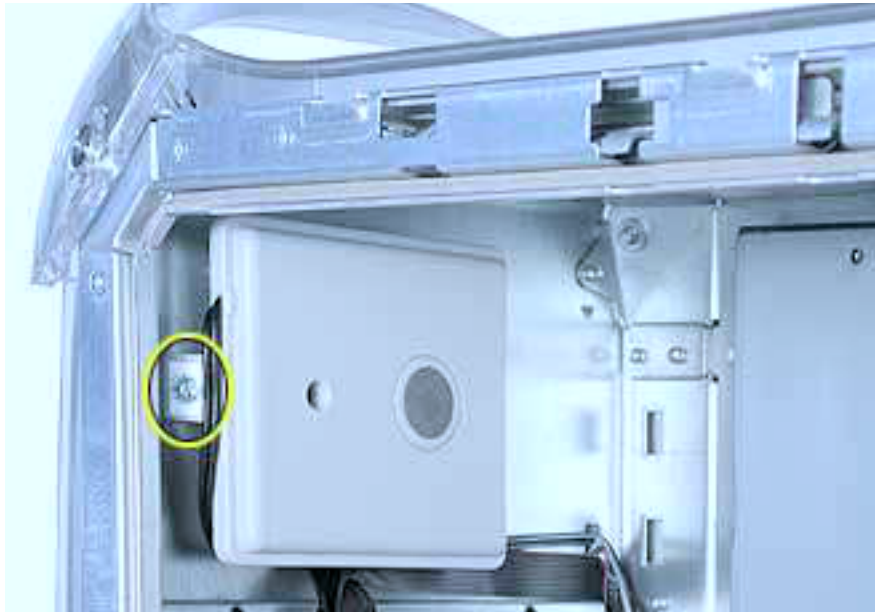

5. Swing the speaker away from the chassis. Press in on the two latches on the right side of the speaker and release the speaker from the chassis.

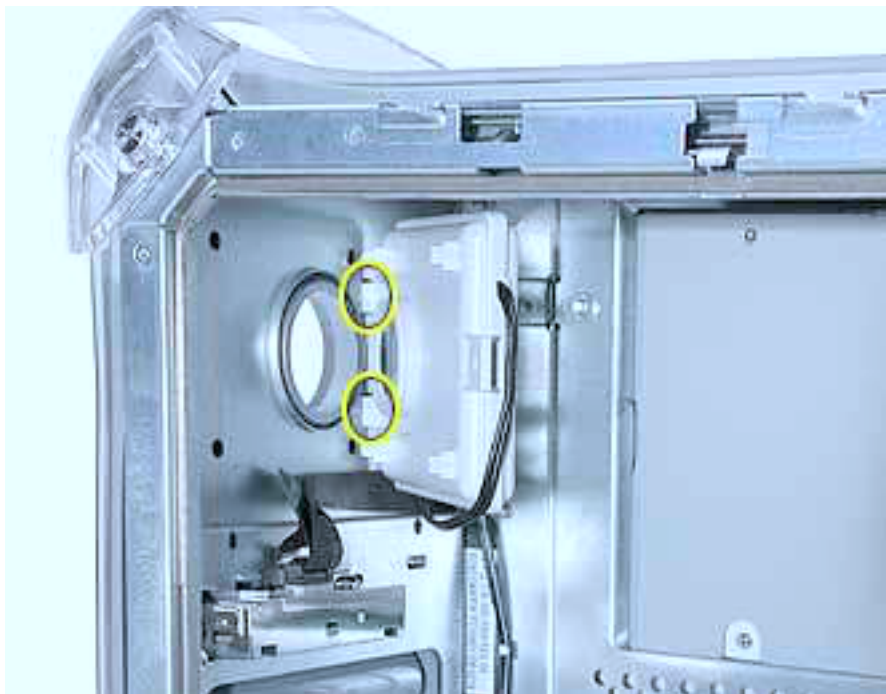

6. Remove the speaker and cable from the computer.