

1. SPECIFICATIONS	1-1	3. MAINTENANCE	3-1
1. SPECIFICATIONS	1-1	1. MAINTENANCE SCHEDULE	3-1
2. DIMENSIONAL DRAWINGS.....	1-4	2. ENGINE OIL.....	3-2
2. SERVICE INFORMATION	2-1	3. OIL FILTER.....	3-3
1. THE IMPORTANCE OF PROPER SERVICING	2-1	4. GEAR CASE OIL	3-4
2. IMPORTANT SAFETY PRECAUTIONS	2-1	5. SPARK PLUGS	3-6
3. SERVICE RULES	2-2	6. VALVE CLEARANCE	3-9
4. SYMBOLS USED IN THIS MANUAL	2-2	7. FUEL STRAINER (LOW PRESSURE SIDE)	3-15
5. SERIAL NUMBER LOCATIONS	2-2	8. FUEL STRAINER (HIGH PRESSURE SIDE)	3-18
6. MAINTENANCE STANDARDS.....	2-3	9. WATER SEPARATOR with WATER LEVEL	
7. TORQUE VALUES	2-7	SENSOR	3-19
8. SPECIAL TOOLS	2-10	10. IDLING.....	3-22
9. TROUBLESHOOTING	2-14	11. SHIFT CONTROL CABLE	3-24
a. ENGINE.....	2-14	12. THROTTLE CONTROL CABLE/	
HARD STARTING	2-14	THROTTLE LINK	3-26
CYLINDER COMPRESSION TEST.....	2-15	13. REMOTE CONTROL LEVER FRICTION	3-28
ENGINE DOES NOT RUN SMOOTHLY	2-16	14. ALTERNATOR BELT	3-28
b. IGNITION (POWER) SYSTEM	2-20	4. ENGINE COVER/COVER LOCK	4-1
ENGINE DOES NOT START	2-20	1. ENGINE COVER	4-2
FUSE LOAD CHART	2-21	2. FRONT SEPARATE COVER.....	4-7
FUSE BOX CONNECTION TABLE.....	2-22	3. L./R. ENGINE UNDER COVERS	4-9
c. STARTER SYSTEM	2-23	4. UNDER COVER FRONT BRACKET/	
ENGINE DOES NOT START	2-23	L./R. SIDE COVER BRACKETS	4-20
d. IGNITION SYSTEM	2-25	5. PROGRAMMED-FUEL INJECTION	5-1
ENGINE IS HARD TO START	2-25	1. SERVICE PRECAUTIONS	5-2
e. FUEL SYSTEM	2-28	2. CIRCUIT DIAGRAM.....	5-3
ENGINE IS HARD TO START	2-28	3. VACUUM CONNECTIONS	5-5
f. CHARGING SYSTEM.....	2-30	4. PARTS LOCATION/	
BATTERY UNDER CHARGED.....	2-30	ECM TERMINAL LAYOUT	5-6
ACG INDICATOR LINE INSPECTION	2-31	5. TROUBLESHOOTING	5-11
g. ALERT SYSTEM.....	2-32	6. TROUBLESHOOTING WITH	
OIL ALERT SYSTEM	2-32	HDS TESTER.....	5-13
OVERHEAT ALERT SYSTEM.....	2-32	a. TROUBLESHOOTING GUIDE BY DTC.....	5-15
ALTERNATOR WARNING SYSTEM.....	2-32	b. TROUBLESHOOTING	5-18
FULL WATER (IN WATER SEPARATOR)		MIL DOES NOT COME ON.....	5-18
WARNING SYSTEM.....	2-32	MIL COMES ON BUT DTC CODE DOES NOT	
MIL WARNING SYSTEM	2-32	APPEAR	5-21
WARNING SYSTEM.....	2-32	ALERT SYSTEM INITIAL OPERATION IS	
WARNING BUZZER SOUNDS		FAULTY	5-23
CONTINUOUSLY.....	2-33	NEUTRAL SWITCH MALFUNCTION	5-26
OIL PRESSURE INSPECTION.....	2-35	TACHOMETER MALFUNCTION	5-27
INTERMITTENT PROLONGED SOUND OF		ECM TROUBLESHOOTING	5-28
WARNING BUZZER KEEPS SOUNDING.....	2-37	MAP SENSOR TROUBLESHOOTING	5-28
INTERMITTENT SHORT SOUND OF		CKP SENSOR TROUBLESHOOTING	5-30
WARNING BUZZER KEEPS SOUNDING.....	2-38	ECT SENSOR 1 TROUBLESHOOTING	5-33
h. SHIFT MECHANISM	2-39	TP SENSOR TROUBLESHOOTING.....	5-34
i. POWER TRIM/TILT ASSEMBLY	2-40	CMP SENSOR TROUBLESHOOTING	5-36
POWER TRIM/TILT ASSEMBLY DOES		IAT SENSOR TROUBLESHOOTING.....	5-38
NOT MOVE	2-40	BARO SENSOR TROUBLESHOOTING	5-39
POWER TRIM/TILT ASSEMBLY DOES		IAC VALVE TROUBLESHOOTING	5-41
NOT HOLD.....	2-41	VTEC SOLENOID VALVE	
POWER TRIM/TILT MOTOR DOES		TROUBLESHOOTING	5-42
NOT MOVE	2-42	KNOCK SENSOR TROUBLESHOOTING	5-43
POWER TRIM/TILT ASSEMBLY QUICK		A/F SENSOR HEATER TROUBLE-	
REFERENCE CHART.....	2-43	SHOOTING	5-44
CHECK POINT	2-44	A/F SENSOR TROUBLESHOOTING.....	5-49
10. CABLE/HARNESS ROUTING	2-45	ECT SENSOR 2 TROUBLESHOOTING	5-51
11. TUBE ROUTING	2-66	ECT SENSOR 3 TROUBLESHOOTING	5-52
12. LUBRICATION	2-77		