

<b>1. SPECIFICATIONS</b> .....	<b>1-1</b>	<b>5. PROGRAMMED FUEL INJECTION (PGM-FI)</b> .....	<b>5-1</b>
1. SPECIFICATIONS .....	1-1	1. SERVICE PRECAUTIONS .....	5-1
2. DIMENSIONAL DRAWING .....	1-4	2. VACUUM CONNECTION .....	5-3
<b>2. SERVICE INFORMATION</b> .....	<b>2-1</b>	3. CARCUI DIAGRAM .....	5-4
1. SYMBOLS USED IN THIS MANUAL .....	2-1	4. TROUBLESHOOTING .....	5-6
2. SERIAL NUMBER LOCATION.....	2-1	PROGRAMMED FUEL INJECTION SYSTEM	
3. MAINTENANCE STANDARDS .....	2-2	(PGM-FI SYSTEM).....	5-10
4. TORQUE VALUES .....	2-6	• ECM TERMINAL ARRANGEMENT.....	5-10
5. SPECIAL TOOLS .....	2-8	• TROUBLESHOOTING GUIDE .....	5-14
6. TROUBLESHOOTING .....	2-13	TROUBLESHOOTING CHART	
• ENGINE.....	2-13	a. ECM.....	5-16
a. HARD STARTING.....	2-13	b. HO2S.....	5-26
CYLINDER COMPRESSION TEST .....	2-14	c. MAP SENSOR.....	5-28
b. ENGINE DOES NOT RUN		d. TDC SENSOR 1, 2/CKP SENSOR.....	5-30
SMOOTHLY.....	2-15	e. ECT SENSOR .....	5-31
c. IGNITION (POWER) SYSTEM.....	2-19	f. TP SENSOR .....	5-33
d. STARTER MOTOR .....	2-22	g. IAT SENSOR .....	5-35
e. IGNITION SYSTEM .....	2-24	h. BARO SENSOR.....	5-37
• FRAME .....	2-27	i. KNOCK SENSOR .....	5-39
a. SHIFT.....	2-27	j. OIL PRESSURE SWITCH	
b. POWER TRIM/TILT ASSEMBLY		(HIGH PRESSURE SIDE) .....	5-40
DOES NOT MOVE .....	2-28	k. HO2S (HEATER).....	5-41
c. POWER TRIM/TILT ASSEMBLY		VTEC SYSTEM .....	5-43
DOES NOT HOLD .....	2-29	TROUBLESHOOTING CHART	
7. CABLE/HARNESS ROUTING.....	2-31	a. VTEC SYSTEM.....	5-43
8. TUBE ROUTING .....	2-43	IDLE CONTROL SYSTEM .....	5-44
9. LUBURICATION.....	2-50	TROUBLESHOOTING GUIDE .....	5-44
<b>3. MAINTENANCE</b> .....	<b>3-1</b>	TROUBLESHOOTING CHART	
1. MAINTENANCE SCHEDULE .....	3-1	a. IAC VALVE .....	5-45
2. ENGINE OIL.....	3-2	b. ALTERNATOR FR TERMINAL	
3. OIL FILTER .....	3-3	SIGNAL .....	5-47
4. GEAR CASE OIL .....	3-4	ALERT SYSTEM .....	5-49
5. SPARK PLUGS.....	3-5	TROUBLESHOOTING CHART	
6. VALVE CLEARANCE .....	3-6	a. CONTINUOUS SOUND.....	5-49
7. THERMOSTAT .....	3-9	b. INTERMITTENT SOUND	
8. FUEL STRAINER (LOW PRESSURE SIDE)/		(LONG BEEP) .....	5-53
WATER SEPARATOR.....	3-10	c. INTERMITTENT SOUND	
9. FUEL STRAINER (HIGH PRESSURE SIDE) ...	3-15	(SHORT BEEP) .....	5-55
10. IDLING .....	3-16	d. OVERHEAT SENSORS 1, 2 .....	5-56
11. THROTTLE CONTROL		FUEL SUPPLY SYSTEM.....	5-58
CABLE/THROTTLE LINK .....	3-18	TROUBLESHOOTING GUIDE .....	5-58
12. SHIFT CONTROL CABLE .....	3-21	TROUBLESHOOTING CHART	
13. TIMING BELT .....	3-22	a. PGM-FI MAIN RELAY .....	5-59
14. ALTERNATOR BELT .....	3-24	b. FUEL INJECTOR POWER LINE.....	5-63
<b>4. ENGINE COVER/COVER LOCK</b> .....	<b>4-1</b>	c. FUEL LINE CUT SOLENOID VALVE... 5-64	
1. ENGINE COVER .....	4-2	INTAKE AIR SYSTEM.....	5-66
2. FRONT SEPARATE COVER.....	4-3	TROUBLESHOOTING CHART	
3. ELECTRIC PARTS COVER .....	4-4	a. INTAKE AIR BYPASS (IAB)	
4. LEFT/RIGHT ENGINE UNDER COVER .....	4-5	CONTROL CIRCUIT .....	5-66
5. COVER LOCK CABLE/ENGINE		5. FUEL LINES .....	5-69
COVER BRACKET.....	4-10	• HOW TO RELIEVE FUEL PRESSURE .....	5-69
6. FRONT LOCK ASSEMBLY/FRONT COVER		• FUEL PRESSURE MEASUREMENT .....	5-69
BRACKET.....	4-15	• FUEL LINES .....	5-70
		• FUEL LINE CUT SOLENOID VALVE.....	5-71
		6. FUEL INJECTORS/	
		PRESSURE REGURATOR .....	5-72
		• FUEL INJECTORS .....	5-72
		• PRESSURE REGURATOR .....	5-73
		7. FUEL PUMP (HIGH PRESSURE SIDE)/	
		VAPOR SEPARATOR .....	5-81
		8. FUEL PUMP (LOW PRESSURE SIDE).....	5-94