




6. Remove alternator/air compressor belt.
7. Remove aft alternator bolt and pivot alternator forward.

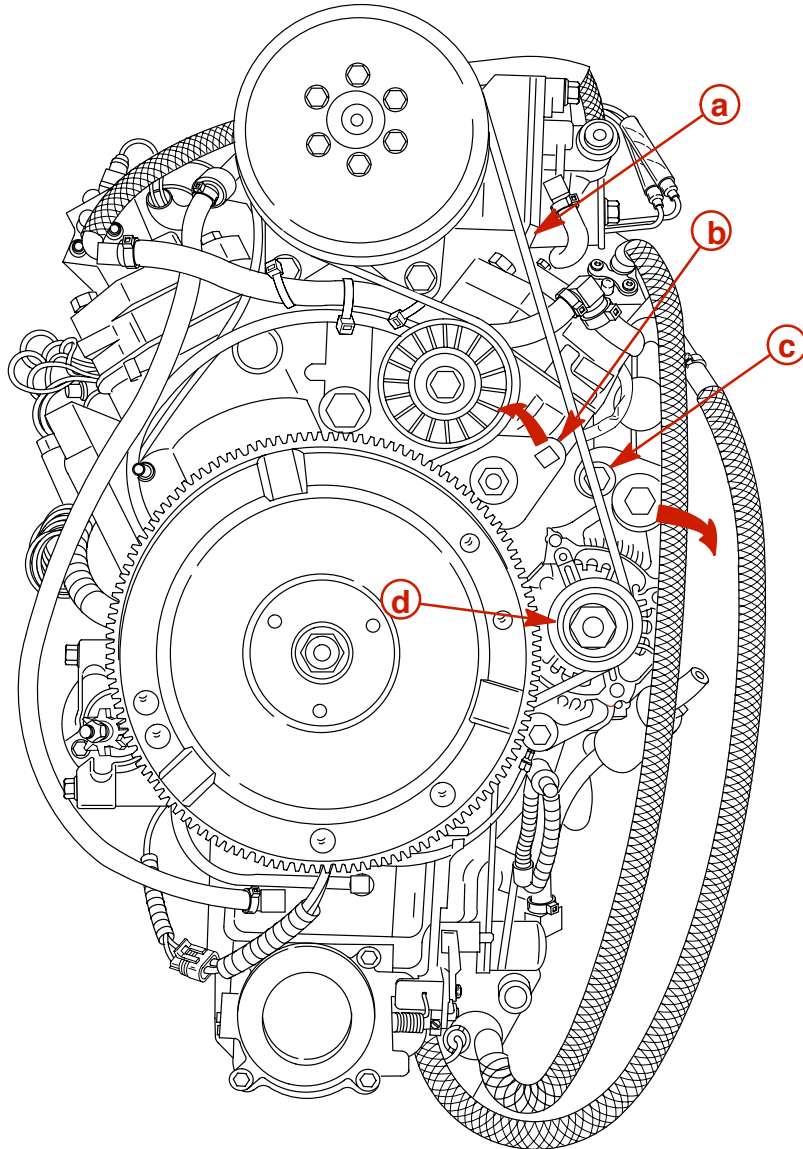

- a** - Alternator/Air Compressor Belt
- b** - Belt Tensioner (rotate counterclockwise)
- c** - Aft Alternator Bolt
- d** - Alternator (rotate forward)

NOTE: It is recommended that a razor knife be used to make a small slit in the oil hoses to aid in removal. Removing hoses without cutting them may result in the breakage of the oil fitting. Trim cut portion off of oil hose before reinstalling hose.

8. Remove oil hoses from fittings on #2, #4, and #6 cylinders.