


ENGINE STOP SWITCH

1. Check:
- Continuity
- Out of specification → Replace.


Lock plate	Position	Leads	
		White	Black
Installed	Free		
	Push	○—○	○—○
Removed	Free	○—○	○—○
	Push	○—○	○—○

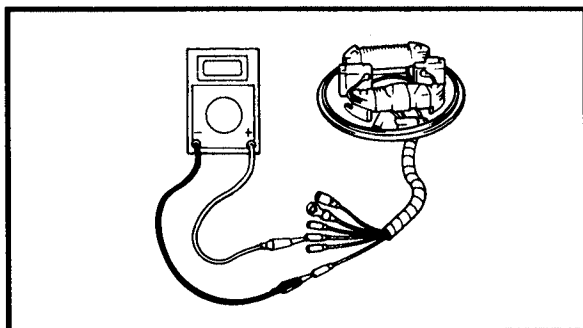

CHARGE COIL

1. Measure:
- Charge coil resistance
- Out of specification → Replace.

	Charge coil resistance: Brown/White (Br/W) – Black (B) 497.7 ~ 608.3 Ω at 20°C (68°F)
--	--

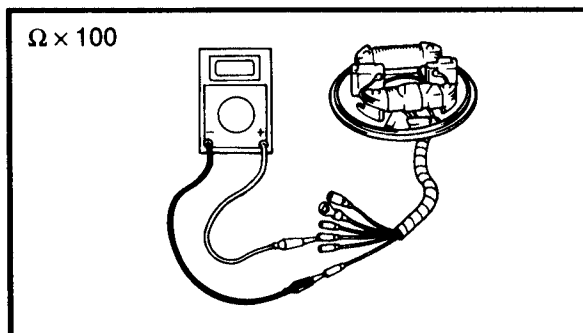

PULSER COIL

1. Measure:
- Pulser coil resistance
- Out of specification → Replace.

	Pulser coil resistance: White/Red (W/R) – Black (B) 12.6 ~ 15.4 Ω at 20°C (68°F)
--	---